

## How to use the GH 3000 Mobile Tracker



Τηλ ανάγκης: 6936660300

Before any action, we must be sure that the tracker is «unlocked»: Check the position of the side slide button on the right side (black arrow).

1. To switch on the tracker: Push the right red button for more than 3 seconds (red arrow), till you hear a characteristic «beep» sound, and the led lights start blinking.
2. Then lock the tracker, so not to push any button by mistake. (Side slide button – black arrow)
3. Leave the tracker in open sky for 3 minutes to get the satellite reception.
4. Put the tracker in the waterproof plastic small bag and close it carefully.
5. If the battery's led light gets red, (green arrow) means there is less than 20% of the battery life, and the battery needs replacement.
6. To switch off the tracker, i. unlock it (black arrow) ii. Keep the red button (red arrow) pushed for 5-7 seconds **till the battery led light** (green arrow) **gets orange colored!** If not sure, please repeat the action after 5 seconds.

To change the battery: At the back side, push down at the point where the orange arrow is, (5) and then push back, sliding the cup. Take out the battery, starting from the bottom side, and put the charged one with the correct direction, starting from the top side and then the bottom side. (2) & (4). Then put again the back cup, sliding carefully in its right position from bottom to top side, until it buckles (5). Be sure that it buckles in the correct position, by looking at its ends. Then, switch on again the tracker.

